


English Version



TAPiano User Manual

O!arcade TAPiano

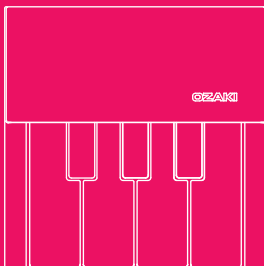

Welcome

Let's play your favorite songs on the piano now!

TAPiano is a physical game controller that allows you to play the rhythm game just like playing the piano.

Connect to your Bluetooth device, and feel free to play the TAPiano App with this mini piano in any way!

What's more, you can unlimitedly play any song you have on your device! What could be better than this?

You Could Play TAPiano with These Devices...



iPhone 4s



iPhone 5



iPhone 5c



iPhone 5s



iPhone 6



iPhone 6 Plus



iPod touch
5th generation



iPad mini



iPad mini
with Retina display



iPad mini 3



iPad Air



iPad Air 2




iPad
3rd generation



iPad
4th generation

Note: TAPiano is exclusively designed for TAPiano App.

Preparation

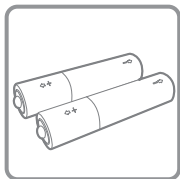

2AAA batteries




Download the App




Turn on Bluetooth
on your device


STEP 1 Turn On TAPiano

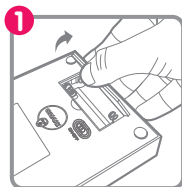

Remove the battery
cover

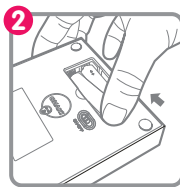

Insert batteries

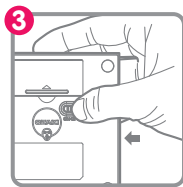

Slide the power
switch

STEP 2 Download & launch the Tiny Band APP



STEP 3

Pair Your Device with TAPiano



Tap "Yes"






Turn on "TAPiano"




Searching & Connected

STEP 4

Place Your iPhone or iPod on the Stand

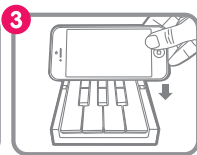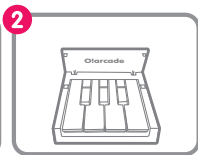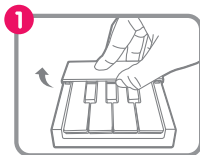


Both iPad
& iPad mini
Perform Perfect
with Your TAPiano

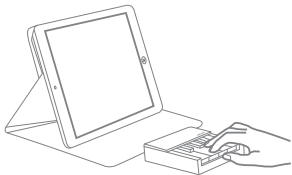

STEP 5

Select Challenge or Jukeboxes Mode

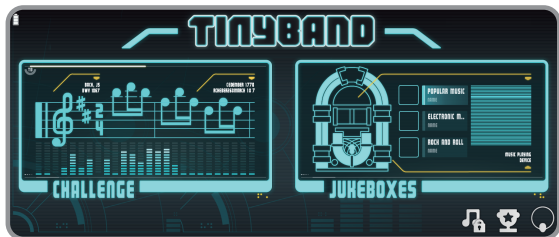


STEP 6

Play & Challenge the Music



 Contents





TAPiano



User Manual

Product Introduction

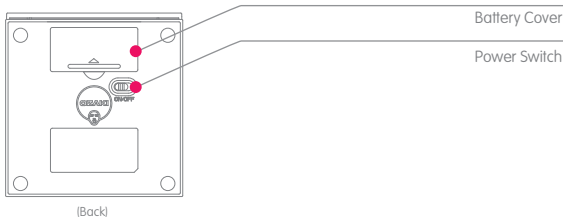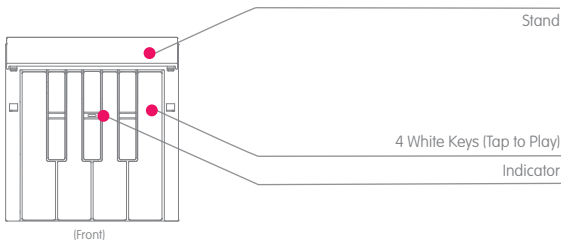

Indicator Definition



Bluetooth Searching

A flashing blue light



Bluetooth Connected

A steady blue light



Stand By

TAPiano will go into sleep mode after 3 minutes.



Wake Up

The light goes off until you press any key to wake it up.



Low battery

A slowly flashing light

Limited One (1) Year Warranty Information

Warranty Coverage

OZAKI's warranty obligations are limited to the terms set forth below:

OZAKI warrants this OZAKI hardware product against defects in design, workmanship and materials under normal use for a period of ONE (1) YEAR from the date of the original user purchase ("Warranty Period"). Accessories accompanying with this product, such as Micro-USB charging cable, carrying bag...etc. are not covered. This Limited Hardware Warranty may be subject to OZAKI's change at anytime without prior notice.

Repair and replacement

The maximum liability of OZAKI battery shall not exceed the purchase price originally paid by you for the product. The original purchaser shall without undue delay notify OZAKI of any defect which appears according to OZAKI RMA Handling, failure to which shall mean that the purchaser waives its right to have the defect remedied. A valid form of a bill of sale or receipt from an authorized retailer/distributor with date of the original purchase must be presented to obtain warranty service. If a valid claim is received within the Warranty Period, the sole remedy of the original purchaser and OZAKI's sole and exclusive liability shall be limited to, at OZAKI sole discretion, either repair of the hardware defect using new or refurbished replacement parts, or replacement of the product. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or thirty (30) days, whichever is longer. When a product or part is exchanged, the replacement hardware becomes the property of the original purchaser and all hardware or part thereof that is replaced shall become the property of OZAKI.

Exclusions and Limitations

This warranty does not apply: (a) to faulty and improper installation, maintenance, service, repair and/or alteration in any way that is not contemplated in the documentation for the product or canted out with OZAKI's consent in writing, operational adjustments covered in the operating manual for the product or normal maintenance, (b) to cosmetic damages, (c) if the product is modified or tampered with, (d) to damage caused by acts of God, misuse, abuse, negligence, accident, normal wear and tear and deterioration, improper environmental conditions (including, but not limited to, electrical surges, water damage and/or heat/cold/chemical exposure) or lack of responsible care, (e) if the product has had the model or serial number altered, defaced or removed, (f) to consumables (such as batteries), (g) to products that have been purchased 'as is' and OZAKI, the seller or the liquidator expressly disclaim their warranty obligation pertaining to the product, (h) to any non-OZAKI hardware product or any software (irrespective of packaged or sold with an OZAKI hardware product) and OZAKI products purchased from an unauthorized distributor/reseller, (i) to damage that occurs in shipment or (j) to damages by any other causes not related to defective design, workmanship and/or materials, (k) cracked or broken cabinets, or units damaged by excessive heat.

Warranty Service

The Limited Warranty is applicable in all countries and may be enforced by contacting OZAKI support worldwide. For more information, please visit: ozakiverse.com/support


FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Attention!

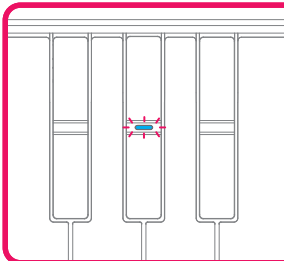

Change the battery when the indicator slowly flashes.

- Change the battery when Indicator slowly flashes.
- Changez la pile lorsque le voyant clignote lentement.
- Cambie la batería cuando el indicador parpadee lentamente.
- Wechseln Sie den Akku, wenn die Anzeige langsam blinkt.
- Caricare la batteria quando l'indicatore lampeggia lentamente.
- Laad de accu op als de indicator langzaam knippert.
- البطارية عن دما يومض الم مؤشر ببطء.
- Mudar a bateria quando o Indicador piscar lentamente.
- 표시등이 느리게 점멸하면 배터리를 교체하십시오.
- Если индикатор медленно мигает, то следует заменить аккумулятор.
- Byt batteriet när indikatorn blinkar långsamt.
- Batteriet skal oplades, når lampen blinker langsomt.
- Zmień baterie kiedy wskaźnik powoli miga.
- Gösterge yavaşça yanıp sönerken pili değiştirin.
- Cseréld ki az akkumulátort, ha a visszajelző lassan villog.
- ランプがゆっくり点滅しているときバッテリーを交換してください。
- 指示燈緩慢閃爍時請更換電池。
- 指示灯缓慢闪烁时请更换电池。

Legal Statement

Users of this product do so at their own risk. Neither Ozaki nor it's associates, dealers or agents, assume the entire liability, cost of repair, correction or any payment or other remedy for the misuse or abuse of this product. Further, Ozaki reserves the right to revise this publication and to make changes from time to time for the contents hereof without obligation or prior notice for the changes.

Specification

Bluetooth connectivity

Battery Requirement: AAA*2 (Battery not included)

Dimensions: 95(W) x 24(H) x 95(D) mm

Weight: 91g

Caution & Important Notes

(Please read these before use)



Do not expose the product to fire or close to high temperature



Do not expose the product to water or high humidity



Stop using if found liquid leakage, overheating or any other unusual conditions



Green power, great recycle using